



1”

Battery Holder Template

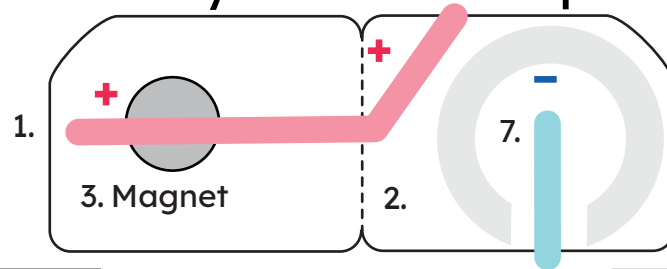


1. Cut & fold Battery Holder Template
2. Adhere the template over the battery holder footprint.
3. Apply a flat magnet to the inner left flap of the battery holder.
4. Cut & glue the front & back of the Circuit Template together.
5. Apply Conductive Fabric Tape over the pink & blue lines; wrap it around the edges of the Circuit Template.
6. Apply LED Sticker
7. Adhere a ball of conductive tape over the negative lead of the battery holder. Insert a 3V CR2016 coin battery negative side down & close.

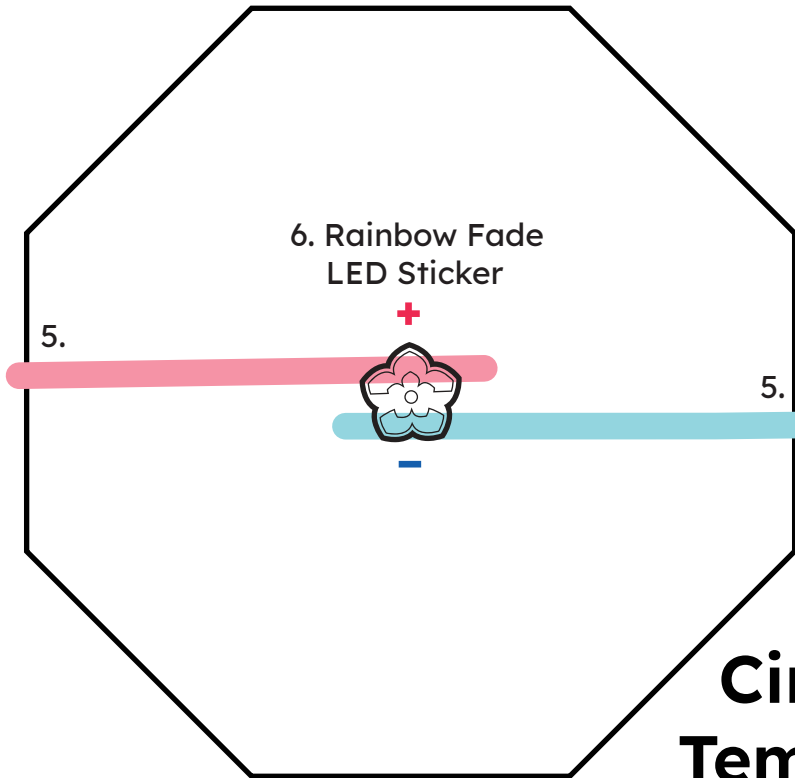

Front

Circuit Template

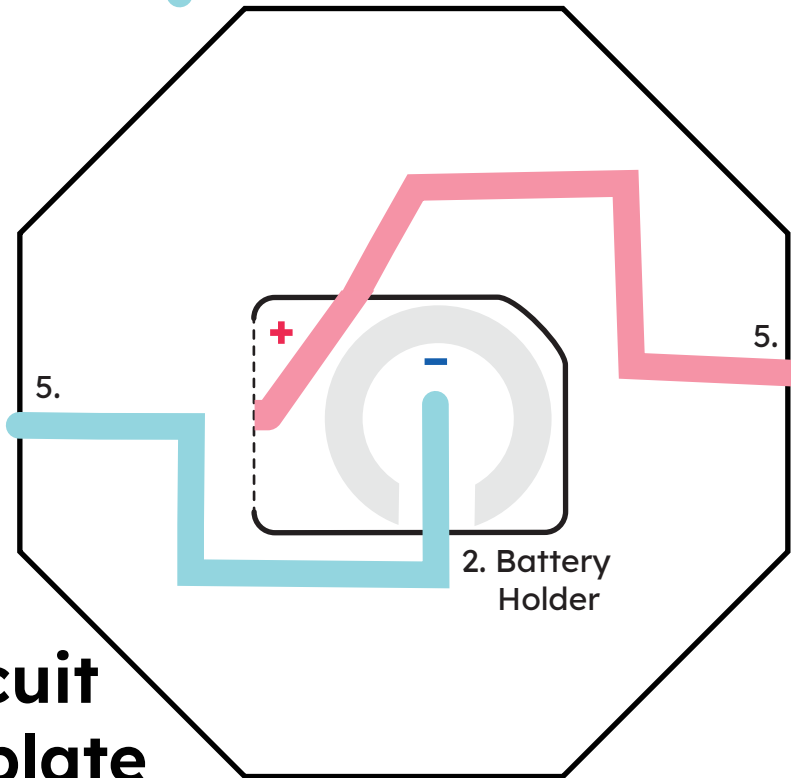

Back